RPCB 736

Replacement Front End Kit

Fitting Instructions

for FT 736R



(C) 1993 must limited

Issue 1 02/02/1993 2 29/09/1993 muTek limited P.O. Box 24 Long Eaton Nottingham NG10 4JA

Contents

- 1) Acknowledgement
- 2) Parts List
- 3) Specification
- 4) Circuit Description
- 5) Fitting Instructions
- 6) Circuit Diagrams
- 7) Parts Lists

Parts List

Your kit should contain the following parts, if any are missing please contact your supplier in the first instance.

- 1) RPCB 736_2_MN 2m main pcb
- 2) RPCB 736_70_MN 70 cms main pcb
- 3) RPCB 736_PA 2 2m PA pcb
- 4) RPCB 736_PA 70 70cms PA pcb
- 5) Fixings Kit consisting of:
 - i) M3 tap
 - ii) 6 off M3 pillar
 - iii) IF interconnection cable
 - iv) N type chassis connector
 - v) 6 off M3 X 6 screws
 - vi) 13 off M3 X 5 taptite screws
 - vii) 1" length of silver plated wire
 - viii) 10uf 35V capacitor
 - ix) L.O. interconnection cables (2)

Note

If the kit has been fitted for you by an approved installer then all parts will have been fitted, and you should have the two old PA pcb's and the old 430MHz front end unit returned to you.

Specification

2m Section Ori	ginal Spec	muTek Spec
Noise figure	8 dB	< 2 dB
Selectivity +/- 12.5kcs +/- 15 kcs		-25dB -60 dB
Image rejection	>60 dB	> 70 dB
Intermodulation free dynamic range	80 dB	> 90 dB
70 Cms Section Ori	ginal Spec	muTek Spec
Noise figure	18 dB	< 1.5 dB
Noise figure Selectivity +/- 12.5kcs +/- 15 kcs	-3 dB	< 1.5 dB -25dB -60 dB
Selectivity +/- 12.5kcs	-3 dB	-25dB

The above figures are based on the published specification and on measurements made on the prototype units, the production units are not expected to differ greatly from this specification.

Circuit Descriptions

The principle of the modification is to totally replace the front end of the original receiver with a new low noise circuit In order to do this it was necessarv linearity. investigate the losses in the original PA circuit boards. result of this was that any modification would be wasted PA boards were replaced as well! This aspect having been resolved, a set of four boards have been designed and tested, to otherwise performance to an true muTek transceiver.

The FT 736 uses a common receive I.F. of 13.69 MHz for all of the units. The 70 cms receiver has an additional 1st IF of 47.43MHz. are a succession of two pole filters of varying widths original receive chain. The result of this is that little filtering of adjacent channel signals take place before This together with low level mixers contribute implemented. intermodulation performance and limited selectivity. The replacement uses an 8 pole monolithic crystal filter muTek is common to both and amplifier which the 2 m receivers, and which can also be used to improve the modules that are fitted (more details on any other later).

The design of the VHF and UHF PA boards are very similar, and in fact are built on identical substrates. The pin allocations the 70 cms pa brick are different to those of the 2m brick, so it Both round. to get these the right way essential emulate the PA protection and S meter drive original design. The filtering and Tx/RX switching functions have redesigned using a 7 element low pass filter for harmonic and the changeover is accomplished with an ultra loss relay. This has reduced the loss in both the Transmit and Receive paths. The bias tap for phantom powering of masthead amplifiers has also been included, but component values have been selected for minimum loss.

2m main pcb is similar in design to many other muTek front ends, consisting of a low noise dual gate mosfet amplifier, band pass helical filter, a diode ring mixer with a high level LO order and low noise IF amplification circuits. In linearity, the mixer has been properly the maximum ports, and the LO drive power has terminated at all optimised. The L.O. signal is derived from the synthesizer on the . This signal is combined with a D.C. receiver used to control the power to the new receiver. output from the mixer is connected to one port of a for way diode This enables the low noise IF amplifier, 8 pole filter and AGC amplifier to be used by all of the receiver sections. The power to the IF processing sections is controlled by a bias voltage that is also used to polarise the diode switch. This can done because the IF and AGC functions are common to the receiver modules.

The 70 cms receiver board is a completely new design. This receiver is a double conversion system and utilises a diode for each conversion. The front end utilises a followed by a three pole helical filter. is mosfet is by the first mixer. The L.O. signal for this mixer a BFR96s. The IF output at 47MHz is filtered by remove image products. No attempt at adjacent channel is done at this stage. The filter is followed by a low noise wide dynamic range amplifier. This buffers the IF signal before This is important as it prevents spurious second conversion. mixing between the two local oscillator signals. The LO for second mixer is also buffered. Like the LO for the 2m amplifier, also has a DC bias that controls the this LO signal receiver. The output from the second mixer is combined with a and then connected to the common IF processing circuit the 2m board.

Although the original IF and AGC connections for the 70cms receiver are not utilised, they are connected to the new board to eliminate any noise injection to the IF by the old receiver.

Fitting the RPCB 736 to the FT 736R

The fitting of the new boards to the transceiver is an extensive operation and should be carried out by an experienced person. Although there is no tuning to be carried out, some of the soldering work is of a delicate nature, and expensive damage can be caused if mistakes are made. Having said this, if care is taken the job is straightforward.

READ the instructions all the way through BEFORE you begin!

- 1) Disconnect all cables from the rear of the transceiver ESPECIALLY the mains cable. Under NO circumstances attempt to work on the transceiver with power connected.
- 2) Referring to fig 1, remove the screws that secure the top and bottom covers of the transceiver. Remove the covers taking care not to strain the connection to the loud speaker, which should be unplugged form the RX unit pcb at the side of the transceiver. Store the covers where they will not be damaged.
- 3) Starting with the 2m original board remove the following connectors:-
 - √ i) J04 Tx output
 - / ii) J05 PA control
 - √ iii) J01 Rx input


Continuing with the 70 cms original board remove:-

- iv) J10 Tx output
- v) J06 PA control

From the 430 MHz front end unit (this is the little can screwed to the back of the pa screen - see fig 2) remove:
vi) J02 1st L.O input

vii) I.F. output

4) From the little PCB's soldered to the backs of the feedthroughs to the 2 and 70 PA units unsolder the blue and red wires, making note of where they connect.

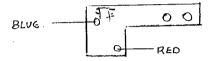


- / 5) Disconnect the 13.8 Volt power feed to the PA units.
- 6) Disconnect the two black earth cables to the PA screen by removing one screw from the 2m board and one screw from the PA screen.
- 7) Remove the connectors from the two 9 Volt regulators mounted on the PA screen.
- Remove the rear right hand screw from each of the 2 and 70 main unit boards, releasing the solder tag connected to the PA screen.
- 9) If extension units are fitted 'downstairs' in the FT 736, remove the 4 screws that secure each unit to the heatsink.
- / 10) Remove the 3 screws '9' (see fig 3) that secure the power supply to the heatsink.
- / 11) Remove the 3 long self tappers '1' (fig 3) that secure the heatsink to the rear of the chassis.
 - 12) Remove the two short screws '2' (fig 3) that secure the connector panel to the heatsink. You should now be able to gently remove the heatsink from the transceiver by easing it out from behind the connector panel. Beware of the heatsink compound from the back of the power supply.
 - 13) Place the Transceiver to one side for the next few operations. Lay the heatsink on its fins on the bench.

 Remove the 6 screws that secure the PA screen to the heatsink. Desolder the 5 control wires from each of the PA pcb's. Disconnect the RF input to the 430MHz front end unit (J01). Feed the coaxial cables through the screen, this should free the screen and 430 MHz front end unit from the heatsink.

- 14) Remove the two screws that hold the 430 MHz front end unit to the screen. Carefully separate the two units and place on one side.
- Return to the Heatsink and PA assembly. Carefully desolder the 5 wires from each PA Hybrid that connect it to the PA board. Also desolder the connection to the Antenna connector Remove 5 screws that hold each PA board to the heatsink. Remove the old PA. pcb's and place on one side.
- \mathcal{J} 16) Clean the smudge of heatsink compound from the heatsink under the 70cms PA board.
 - 17) Turn the heatsink over and remove the SO 239. From the kit supplied, extract the N type connector, the packet of M3 X 5 taptite screws and the two new PA boards. Secure the N type connector to the heatsink in place of the SO239, using 3 of the taptite screws. Turn the heatsink back onto its fins. Solder the short length of 18swg silver wire to the centre of each N type. Make sure that this is approximately vertical.
 - 18) Identify the 2m and 70cms PA boards by the circle round the 2 or 70 in the bottom left hand corner. Using 5 taptite screws for each board, secure to the heatsink in the appropriate position, making sure that the wire from the N type connector passes through the board.
 - $\sqrt{}$ 19) Carefully shorten the wires to each of the PA hybrids and solder to the pads on the new PA boards.
 - 20) Recover the PA screen and carefully solder the 5 control wires to each board according to the following code:-

Red +13.8V
Orange T9V
Yellow AFP
White ALC
Blue Preamp

21) Pass the new RF cables through the holes in the Screen, as shown below.

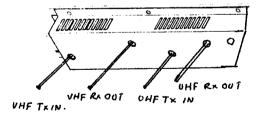

22) Secure the screen to the heatsink using the original screws.

Remember that the centre top location is left blank for the
earth wire when the heatsink is installed in the rig.

- Place the heatsink assembly to one side. Return to the main 23) chassis and remove the remainder of the plug in connectors from the 70 cms main unit. Remove the main unit pcb from the \checkmark chassis. Using the M3 tap provided cut a thread in the three \checkmark holes marked $\ddot{'}$ A' in fig 2. Remove C129 from the 70 cms main See fig 4 for the location of this component. Solder one of the white L.O. cables to the main unit as shown, the screen of the cable should be soldered to the vco screen and junction of D12 and R99.Desolder the core to the 1st IF input cable - this is no longer required. Replace the main unit in the chassis and secure with 2 self tappers in the holes nearest the front of the rig. Reconnect all of the plug in cables except J15 which will be connected to the new board. Carefully unwind the wire loops secure the first LO cable along side the Tx strip screen.
- 24) Carefully remove all of the plug in connectors from the 2m main unit and remove the unit from the chassis. With the M3 tap cut threads in the three holes marked 'B' in fig 2. Desolder and remove C11 from the 2m main unit. Solder the other LO coaxial cable as shown in fig 5, the screen should be soldered to the screen of the VCO. Replace the unit in the chassis, again securing the unit with the two self tapers nearest the front of the rig. Replace all of the plug in connectors except JO2 which will be connected to the new board.
- Carefully ease the heatsink back onto the main chassis and secure with the 3 long screws '1' and the two short screws '2'. from the kit supplied, locate the 6 M3 pillars and install these in the 2 and 70 main units. Restore the black earth wire to the centre top of the PA screen. Restore the two connectors to the 9 Volt regulators. replace the main 13.8V feed to the PA units. Solder the 10uF capacitor to the tag strip at the rear of the transmit board, where the 13.8 Volt wire is connected to a large toroid. OBSERVE POLARITY. this capacitor reduces a lot of broad band noise from the switch mode supply.
- (26) Reconnect the thin Blue and Red wires to the little pcb's mounted on the feedthroughs on the PA screen. (Reverse instruction 4).

ent 01769

269213

- 27) Starting with the 2m main unit replace the following connectors:
 - i) J04:Tx output
 - ii) J05 PA control

Continuing with the 70 cms main unit replace:-

- iii) J10 Tx output
- iv) J06 PA control
- this point you are now ready to install the muTek front 28) Αt end boards. These fit on top of the nylon pillars. Starting with the 2m board, secure the board to the pillars with / M3 X 6 screws provided. The central screw by the L.O. input secure the remaining black earth wire from the PA screen. Plug the antenna connector in the socket The red coded coax should be connected V.H.F. IN. socket marked L.O. in. Solder the flying lead from the u pad to the red +13.8 V wire on the P.A. feedthrough. connect the plug from JO2. Ensure that the blue wire is towards the \checkmark rear of the rig. A moderate amount of force will be required the first time this connector is inserted.
- 29) Secure the 70cms board to the pillars over the 430MHz main unit with the remaining M3 X 6 screws. Make sure that the white coded cable is lead between the side of the new board and the 430MHz PLL unit. Also make sure that the 1st L.O. and the J15 connectors are accessible. Connect the Antenna cable to the socket marked UHF in. Connect the 1st and 2nd L.O's to their appropriate connectors. Connect J15 to the 3 pin header, orientation is not important. Use the Blue coded I.F. link cable provided to connect the I.F. output on the 70 cms board to I.F. IN 1 on the 2m board. This completes the installation.
- 30) Taking care to avoid the mains protection board, set up the FT 736 and connect the 2m output to a power meter and dummy load. Select 145.000 MHz and FM mode. If the S meter reads above S1 then it should be set back to this reading by adjusting the IF Gain pot (Fig 8) on the 2m muTek board.
- Reduce the Tx Drive control to minimum and select Transmit mode using the MOX switch. Advance the drive control untill a reading of just over 25W is obtained. On th 2m main board adjust VR 02 for a reading of exactly 25W. Adjust VR 04 for a reading of 8 on the Po meter. Using a DVM probe the anode of D32 and adjust VR 03 for a reading of approximately 1 volt. Deselect MOX.

Transfer the Dummy load to the U.H.F. antenna connector. Select 435MHz and FM mode. Reduce the drive control to minimum and select MOX. Advance the drive control untill a reading of just over 25W is obtained. On the 70cms main baord adjust VR 04 for 25W, VR 06 for a reading of 8 on PO meter and probing the wire link between D19 and VR 04, adjust VR 05 for a reading of about 1V. This completes the alignment. Replace the top and bottom covers, not forgetting to reconnect the loudspeaker connector.

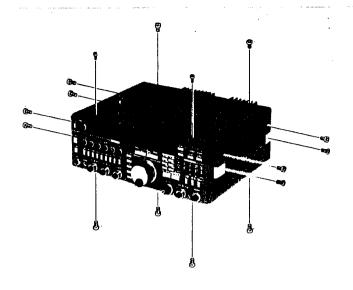


Figure 1

Location of case screws

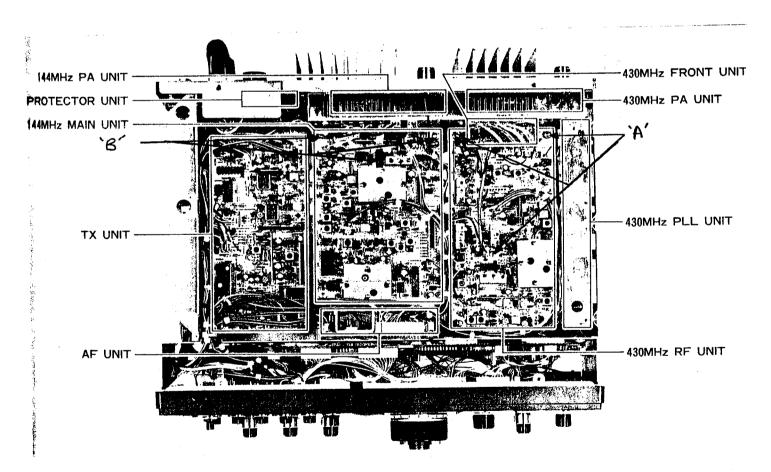
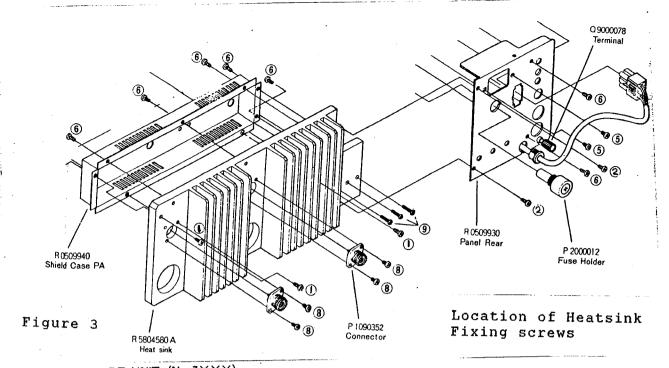
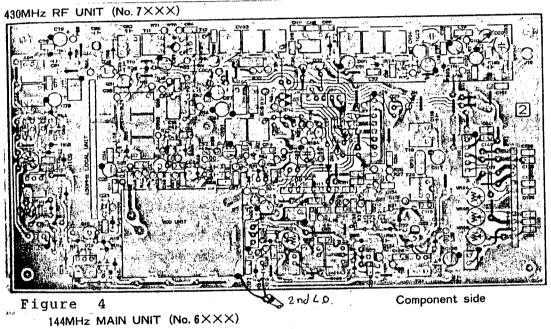


Figure 2

Location of units in FT 736








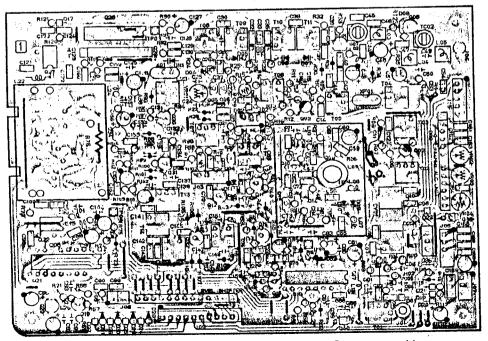



Figure 5

Component side

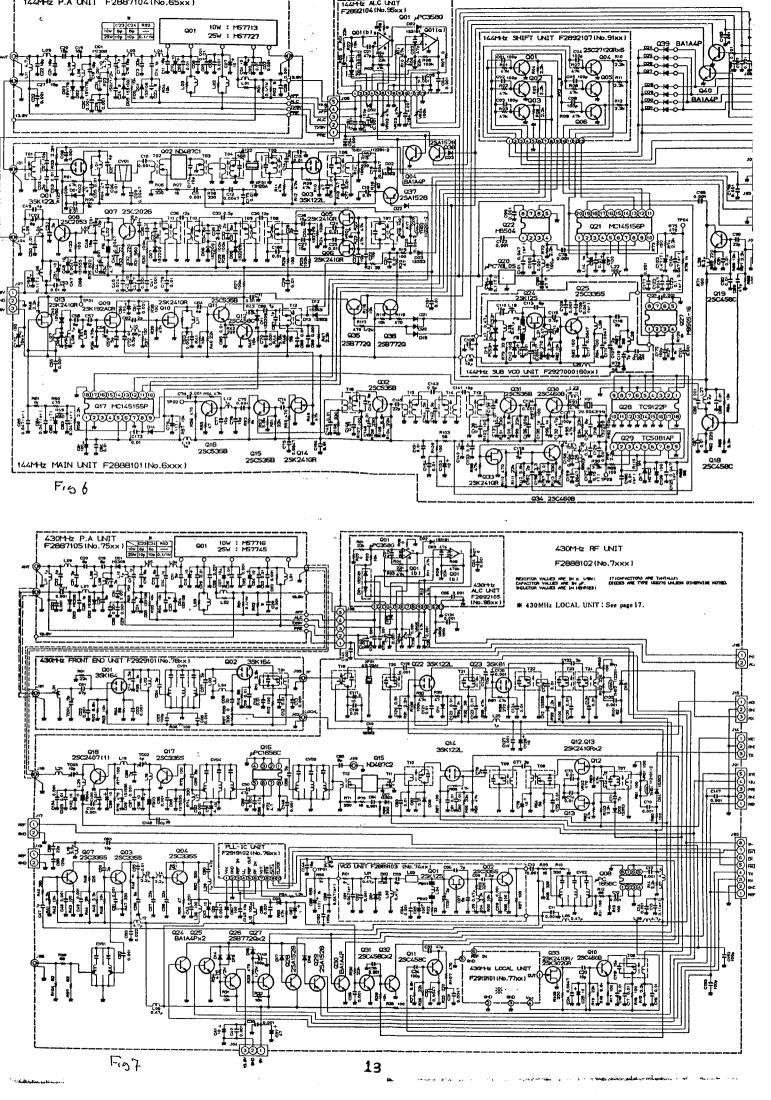

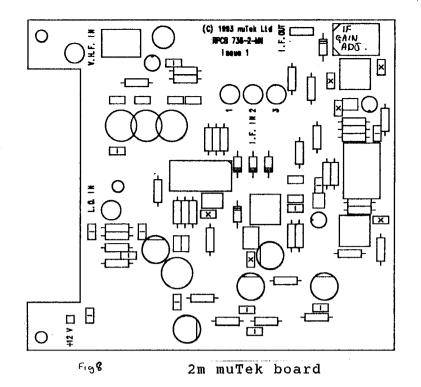

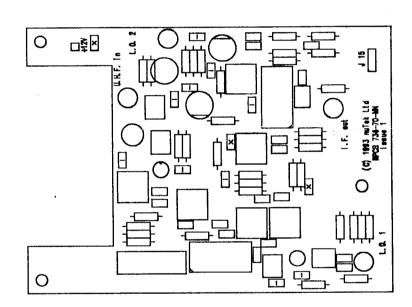

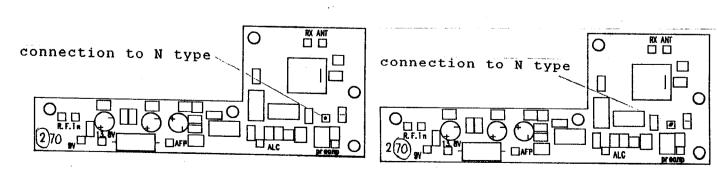

70 cms muTek board

2m P.A. board

Fig 9

70 cms P.A. board

Revised: February 4, 1993 Revision: 1

Item	Quantity	Reference	Part
	2	R2,R9	10R
1	2 1	R6	18R
2	1	R12	51R
3	7	R8,R17,R18,R24,R26,R29,	100R
4	,	R33	
_	2	R10,R34	150R
5	2	R5,R4	220R
6	2		390R
7	1	R35	470R
8	2	R1,R3	1K5
9	1	R19 R20,R28,R?	2K7
10	3	R11,R21	3K3
11	2	R7	4K7
12	1	R27,R32,R36	10K
13	3	R15,R16,R22,R23,R31	39K
14	5	R14,R30	82K
15	2	R13,R25	1M0
16	2	C7	8q6
17	1	C26	8p2
18	_	C1,C3	12p
19	_	C8	33p
20		C12	39p
21		C10	68p
22		C2	100p
23		C4,C5,C6,C9,C11,C13,C15,	1n0
24	12	C19,C20,C21,C22,C24,C25	
٥.	, 6	C14,C16,C18,C39,C40,C?	10n
25		C23	1/5p
26	_	L1,L10	220uH
27	_	L5,L6,L7,L9	5.5T
28	•	L2,L3,L4	KACS4520
29	_	Q3,Q8	2N3906
30		Q4 Q4	BF199
31	_	Q1,Q2,Q5	BF988
32 33		06,07	MPSA18
34	_	D1,D2,D3,D4,D5	1N4148
35		X1	SBL-1
36	-	XF1	FILTER
3,	_	L8	TAPIND
31	•	JP1	HEADER 3
3:	_	J8,J2,J3,J4,J 6	SMJ
	-		

Revised: February 4, 1993 Revision: 1


			Revision:
<u> Item</u>	Quantity	Reference	Part
1	1	R9	8R2
2	2	R3,R11	10R
3	2	R10,R48	22R
4	1	R36	27R
5	1	R38	47R
6	1	R23	51R
.7	4	R4,R32,R40,R41	100R
8	2	R37,R39	120R
9	2	R46,R45	220R
10	1	R33	330R
11	$\overline{1}$	R8	390R
12	2	R1,R2	470R
13	1	R34	1K0
14	2	R7,R12	2K2
15	1	R42	2K7
16	1	R30	4K7
17	3	R43,R44,R47	10K
18	1	R35	12K
19	1	R31	33K
20	_ 1	R6	39K
21	1	R5	82K
22	ī	C2	2p2
23	1	C1	8p2
24	1	C27	10p
	1		
25		C28	12p
26	1.	C32	22p
27	5	C33,C17,C30,C35,C46	33p
28	2	C16,C26	68p
29	2	C15,C36	100p
30	2	C31,C34	120p
31	11	C3,C4,C6,C7,C8,C9,C10, C12,C29,C37,C39	1n0
32	4	C13,C14,C38,C47	10n
33	1	C5	1/5p
34	1	L1	100-071
35	2	L13,L12	100-076
36	1	L14	.33uH
37	1	L8	0.5T
38	1	L7	2T
39	2	L2,L3	3T
40	3	L9,L10,L11	BEKNK 4028
		•	
41	1	FL1	7HT
42	1	Q8	2N3906
43	1	Q3	BF199
44	1	Q1	BF988
45	2	Q2,Q4	BFR96
46	1	Q7	MPSA18
47	2	X1,X2	SBL-1
48	1	P4	PIN
49	4	J02,J01,J03,J04	SMJ
50	3	L19,L20,L47	150uH

FT736 PA replacement

Revised: February 4, 1993 Revision: 1


Item	Quantity	Reference	Part 2m	Part 70 cms
1 2 3	2 2 2	R6,R7 C11,C12 C9,C10	10K 1p0 10p	10K 1p0 10p
4 5 5	1 1 2	C1 C4 C3,C2	22p 22p 39p	4p7 6p8 8p2
6 7	5	C6,C7,C14, C16,C18 C13,C15,C17	1n0 10u	1n0 10u
8	1 1	L2 D3	1uH BAS 16	1uH BAS 16 RELAY DPDT
11 13 14 15	1 2 2 3	RL1 D6,D7 R8,R9 L4,L5,L6	RELAY DPDT BAS16 OR1 5T Ag	BAS16 OR1 1.5T Ag
16	1	U1	M57727	M57745

Note Pins 2 & 3 change function between the M57727 and the M57745. The circuit Shows the correct orientation for the 2m amp. These pins are reversed on the 70cms amp.

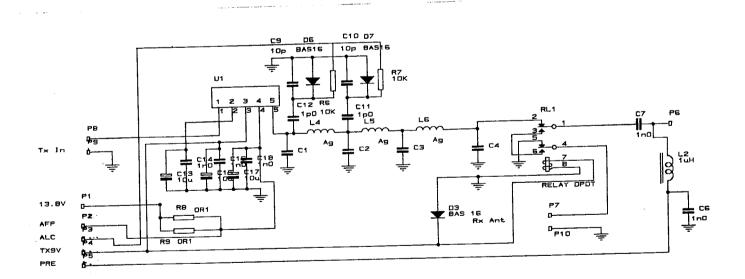

Reference	2m	70 cms
Ne1 57 57.03	M57727	M57745
1456	51	1.51
	220	407
	390	802
LE.3	225	6p8
C2.3	220	

FigII P.A. board schematic diagram

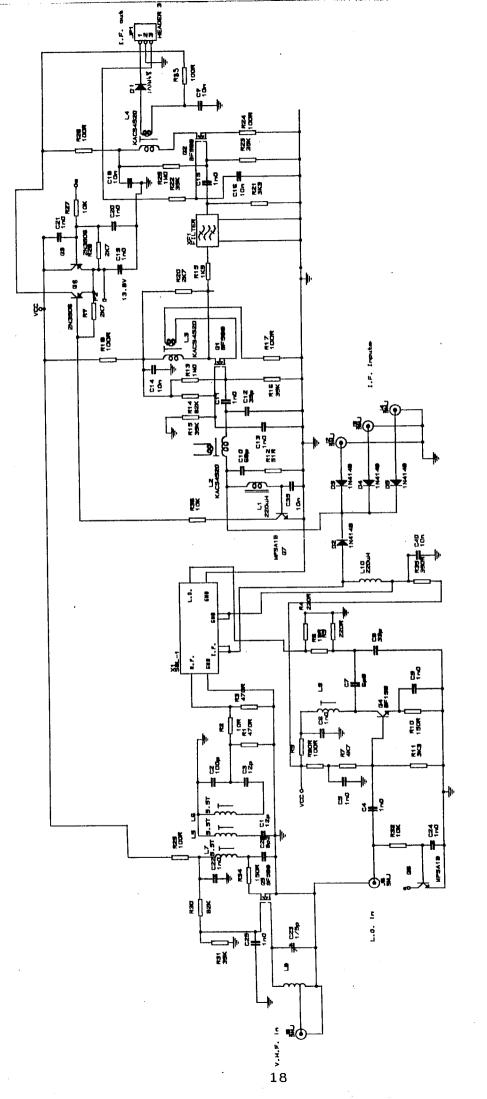

2m muTek board schematic diagram

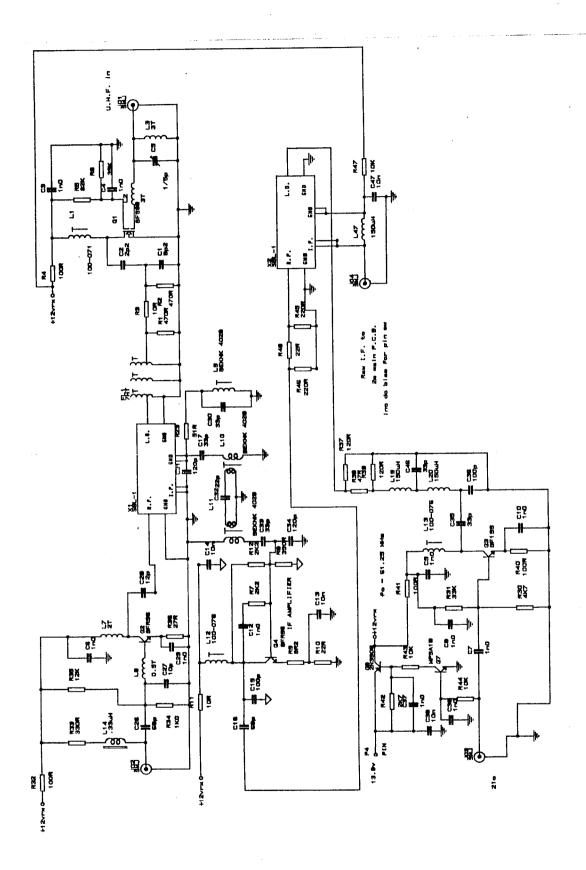


Fig.13 70 cms muTek board schematic diagram

mulek limited 0602 729467

R.F. technology 433mHz PLL FOR SUPPRESSION 0 OF SPURIOUS VCO RESPONSES. (8)CAN Add SHORT LENGTHS of Timod copper 70cms. WIRE AS SHOWN SOLDER TO GrOUND PLANE OR SCREEN CAN SOME. LINKS 0 HAVE MORE AFFECT 3 THAN OTHERS 4 BUT MOST STRAY (C) 1993 milek Lid 5 Ō RESPONSES IN DUPLEX MODE CAN BG REDUCED to (Noise + Ed 57 2M R/TX SECURE WIRE ASOLDER TAG ORIG OR METAL TAPE UNDER THIS SCREW. VCO CAN □ E 13MH2 TX PLL TX UNIT

20